



**Safe Store, 198 - 202 Waterloo
Road, Birmingham, B25 8LD**

 
Tel: 0333 577 9597

Email: info@vcomfort.co.uk

Web: www.vcomfort.co.uk

ISUPREME MAX 4D

MASSAGE CHAIR

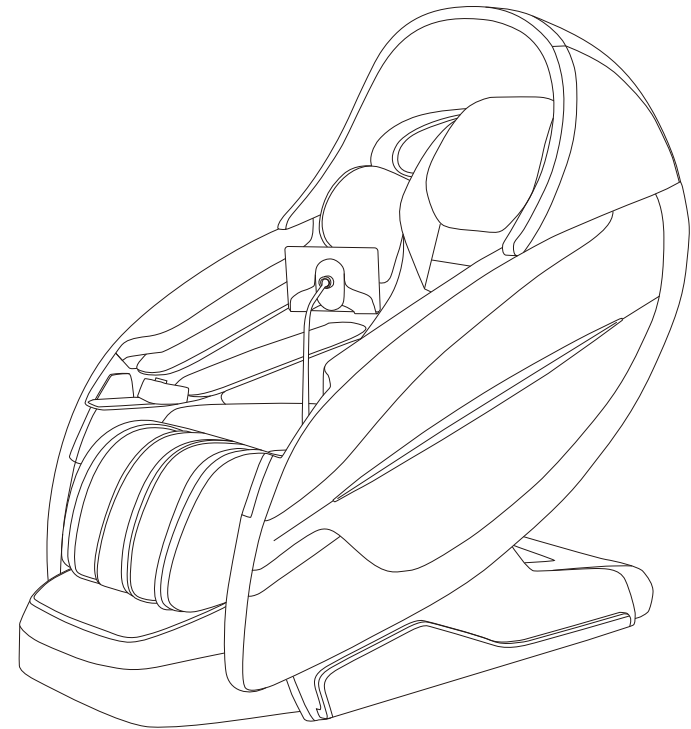

MODEL:MS-131 PLUS


CONTENTS

Please read and follow all safety and operating instructions listed in this user manual prior to use. Basic precautions should always be used when operating.

Safety Instructions	-----2-3
Product Specifications	-----4
Product Components	-----5-6
Chair Installation	-----7-9
Before Use	-----10
Remote Controller	-----11-12
Operation Guide	-----13-19
Trouble Shooting	-----20
Maintenance	-----21

Note: Our company reserves the right to revise the design and description of this product without any further notice.

 MAINTENANCE

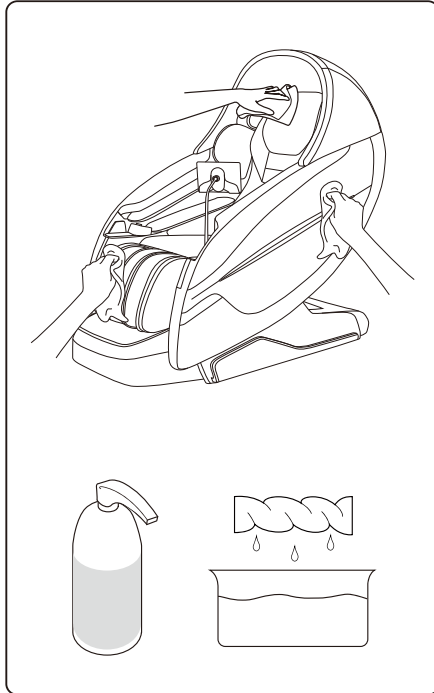


- Turn OFF and pull out the power plug before clean the massage chair, do not touch the power plug with wet hands.

- Use dry cloth to wipe and sweat and other besmirch.

- Please use neutral wash to wipe and lightly brush the chair.

 - Please airing.

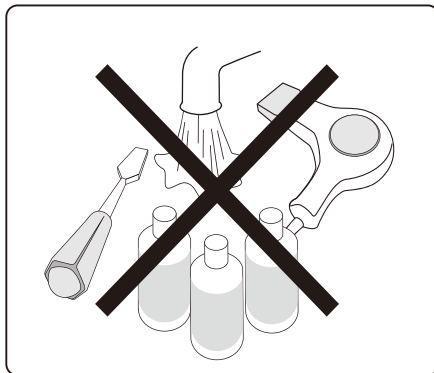

- Do not use water to clean the chair.

- Do not use alcohol, benzene wash and etc.

SAFETY INSTRUCTIONS

Warning

The power plug must insert properly to the power outlet. If the connection of power plug is not connected properly it can result the risk of electric shock.

Do not modify the power plug provided with the product. If the outlet is not suitable. Please make sure that the power outlet is properly installed by a qualified electrician. When using the massage chair, basic precautions should always be followed to reduce the risk of electric shock.

1. Please make sure that the power plug is properly inserted into the proper outlet.
2. Make sure that the power plug is properly inserted into the proper outlet to reduce the risk of short-circuit and fire.
3. Always unplug the massage chair from the electrical outlet immediately after use and before cleaning.
4. Do not use the massage chair in places where the humidity is high.
5. Do not use the massage chair for outdoors and avoid place with direct sunlight.
6. If the power goes OFF during use make sure to switch the power OFF position and removed the power plug out from power socket to prevent damage when the power is restored.
7. Do not operate the massage chair if the power cord is wet or damaged.
8. Do not plug or unplug the power cord from the power socket with wet hands.
9. Supervision is necessary when the massage chair is being used by or near the children. or disabled person.
10. Use the massage chair only for its intended use as described in this use manual.
11. Do not stand, sit or jump in the calves rest .backrest and armrest when the massage chair is in use to prevent any injury.
12. Do not fall asleep during the massage session.
13. Always keep the massage chair clean and do not insert any object into the gaps and around the massage chair.
14. Do not move the massage chair by pulling the power supply cord.
15. Always check whether the surface of the massage chair is torn or ripped before usage, if you found any unfamiliar rips in any area of the cloth in the backrest, do not use the massage chair, kindly contact the authorize service center for repair.
16. This appliance is designed for household use only.
17. For those people who suffering from illnesses, please consult doctor before use.

SAFETY INSTRUCTIONS

18. The following condition should consult doctors before use :
- Suffering from malignant tumor
 - People with heart disease
 - Woman in pregnancy, menstruation and puerperal fever
 - People with osteoporosis
 - People who are medicated or under medication
 - People with back bended exceptionally by the accident or disease.
19. If you experience pain during usage, stop using the massage chair immediately, if any injuries occur, seek medical treatment immediately.
20. Do not massage the swollen or inflamed parts of the body.
21. This product is non-professional appliance designed to provide a comfortable massage.
Do not use this product as substitute for medical treatment.
22. Each massage session should not exceed 30 minutes. Massage the targeted area for only 15 minutes, over-massaging can lead to overheating , thus giving the appliance shorter lifespan.
23. Do not operate where aerosol(spray) product are used or where oxygen is being administered.
24. The massage chair is not suitable for children aged 12 and below.

NOTE:

This appliance is not intended for use by persons(including children) to reduce the physical sensory or mental capabilities, or lack of knowledge how to use the massage chair unless they have been given supervision or instruction concerning to use this appliance by the responsible person for their safety.

If the power supply cord is damaged, it must be replaced by a special or assembled available from the manufacture or its service agent .

The massage chair heats up during operation. persons sensitive to heat must take extra caution when using the massage chair .

TROUBLE SHOOTING

If the sounds or movements are not normal, please turn off the massage chair and remove the plug from the electric outlet. Please contact the customer service department for further assistance.

Problem	Solution
The massage chair is connected to power but is not functioning.	1. Check to see if the power plug is inserted properly or if the power outlet is functioning properly. 2. Check to see if the main power switch is in the "I" position.
The remote controller is responding, but the massage chair is not functioning.	The massage chair may have automatically shut down due to overheating protection devices. Please turn off the power and allow the chair to cool off for 30-50 minutes.
Both the remote controller and massage chair are not responding.	The massage chair automatically turns into "full stop" or into "idle" mode when a massage program is completed. Please press the power button again to turn on the chair.

OPERATION GUIDE

2 The method of playing the bluetooth music in massage chair:

 
A: Match: Open the bluetooth function in mobile phone or Ipad, and search nearby, choose the massage chair bluetooth function music equipment and match with it.

B: Play music: After matching with it, you can display the music by mobile or APP music display software.

Attention:

Please off the bluetooth connection when not in use so as for other devices to connect smoothly.


3 After use

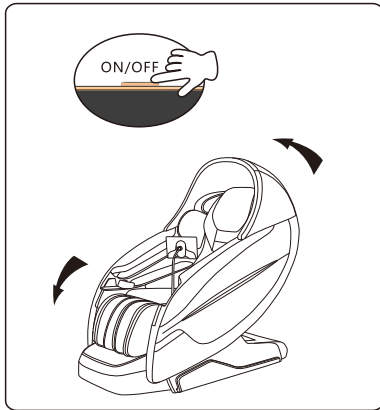

1) Press the power button to power off the massage chair.

*Make sure whether there are no barriers around the massage chair.

 2) Get up when massage chair rest to initial state

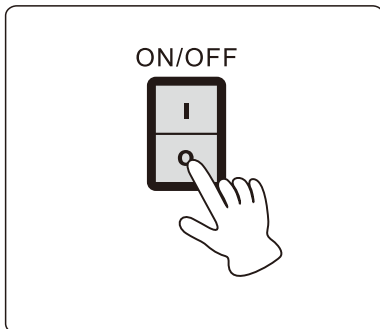

3) Turn off the main power switch.

4) Remove plug from power outlet.


* Please do not pull on the power cord to remove the plug.

* Please do not unplug with wet hands.


PRODUCT SPECIFICATIONS

Description	Specifications
Product Name	Massage Chair
Model No.	MS-131 PLUS
Rated Voltage	110-240V~
Rated Frequency	50-60Hz
Rated Power Consumption	200W
Carton Dimension	Main Body: 1460(L)x856(W)x1245(H)mm
	Foot: 600(L)x536(W)x630(H)mm
Weight	Main Body: N.W.: 128kg G.W.: 146kg
	Foot: N.W.: 25kg G.W.: 28kg

 Main Body Diagram(Front)

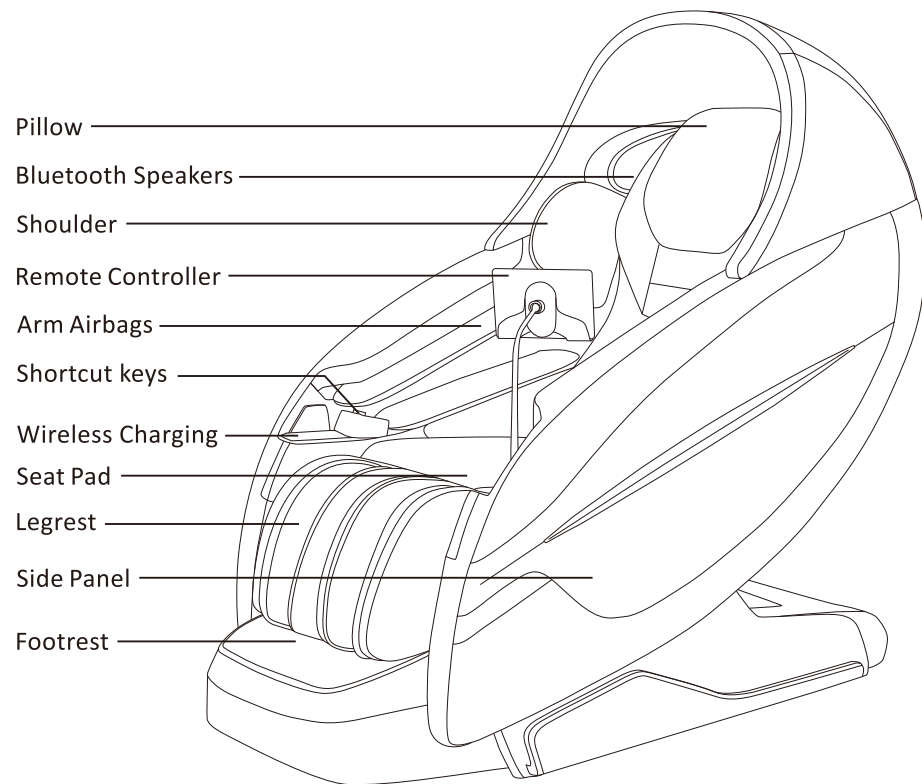

 10. Voice

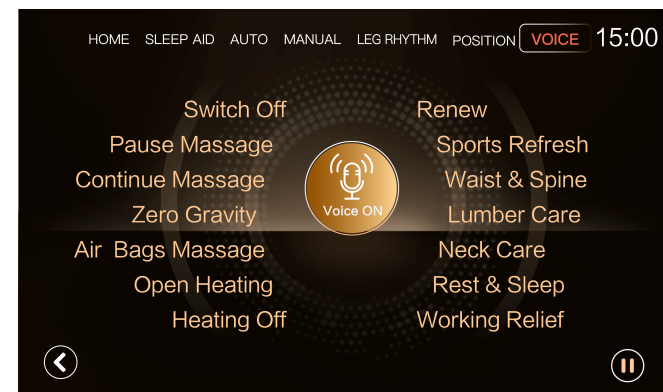

Press the "Voice ON" key; say the words as shown in the picture; Then the chair will activate the corresponding massage service.

11. Warning

 


When the massage chair displays the anti-pinch prompt (above) interface, the massage chair will automatically stop running. Please check whether there are foreign objects under the back of the massage chair. At this time, press the ⏻ key, the massage chair will shut down at the safest angle; press the ▶ key, the massage chair will re-test and continue to run.

OPERATION GUIDE


PRODUCT COMPONENTS

8. Leg rhythm

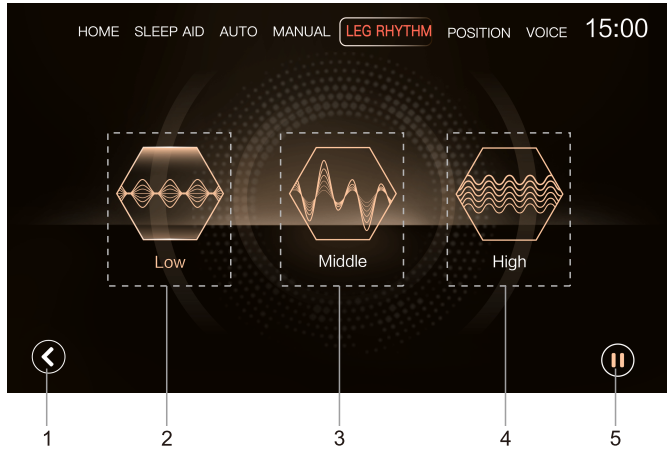


- 1. Return
- 2. Slow speed vibration
- 3. Gentle speed vibration
- 4. Quick speed vibration
- 5. Pause

 9. Position adjust

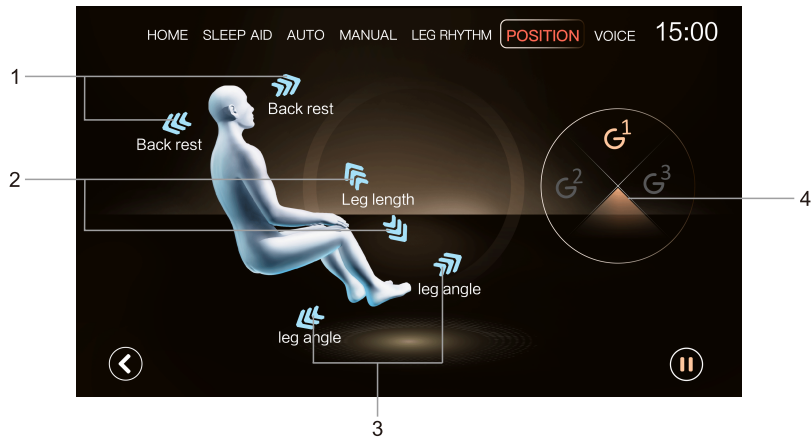


- 1. Backrest incline/decline
- 2. Legrest extend
- 3. Legrest incline/decline
- 4. Zero gravity: three option

 Main Body Diagram(Rear)

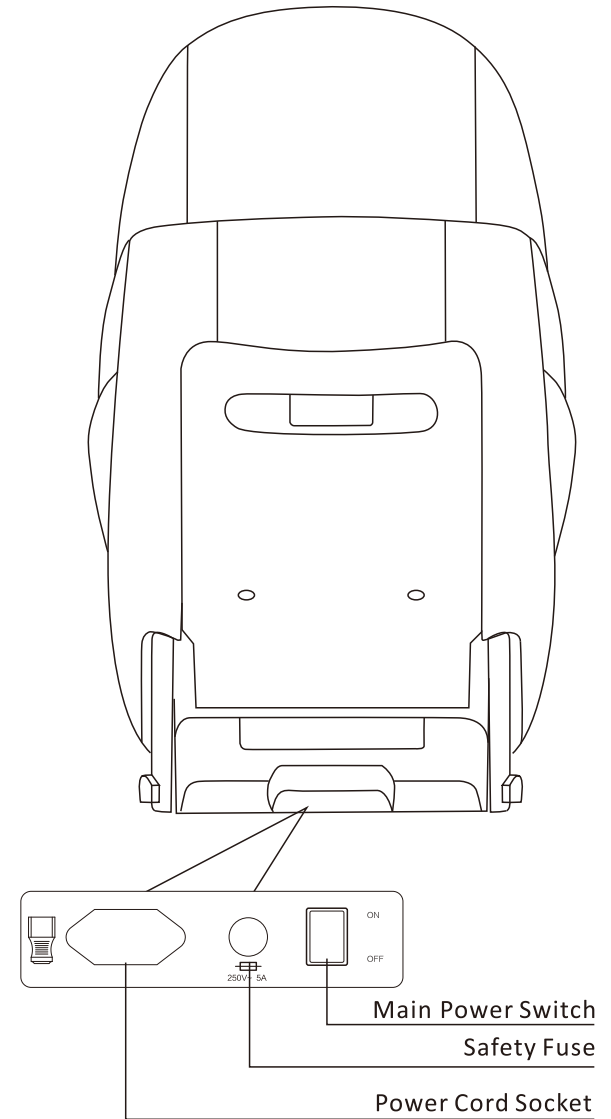


1 Install the hood

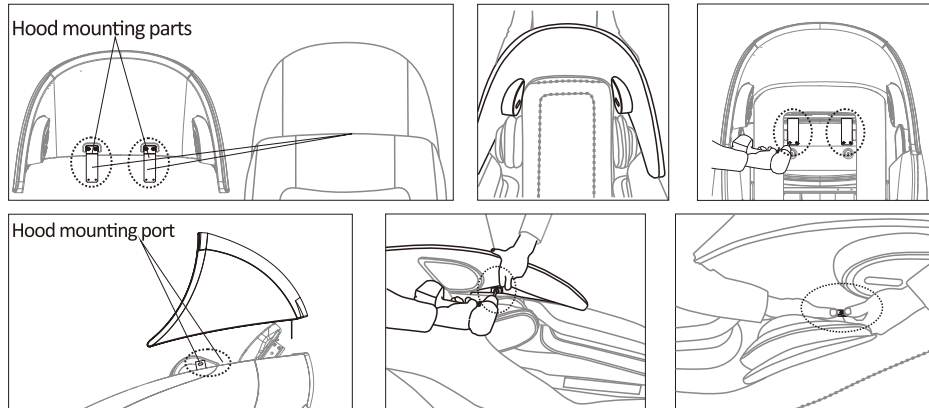 


- (1) Fasten the hood mounting parts on the back end of hood with 4pcs screws.
- (2) Un-zip the zippers on the underside of the hood and wear-resistant backrest cloth, seat the hood on top of the chair body, then insert the protruding part of hood mounting parts on the back end of the hood into the massage chair frame, and align hood mounting parts with the holes of plastic parts inside the side panel, at last fasten 4pcs screws. Zip up the backrest wear-resistant cloth.
- (3) The hood mounting parts on both sides of the chair body are stuck into hood leather sleeve, and 1pc screw is locked on each side.
- (4) Locate and attach the wire terminals on the left and right sides of the hood to the wire terminals on the left and right sides of chair body, and then hide the wires that are connected well into the elastic cloth sleeve.
- (5) Finally, close both zipper on the underside of the hood

 2 Install Seat Cushion

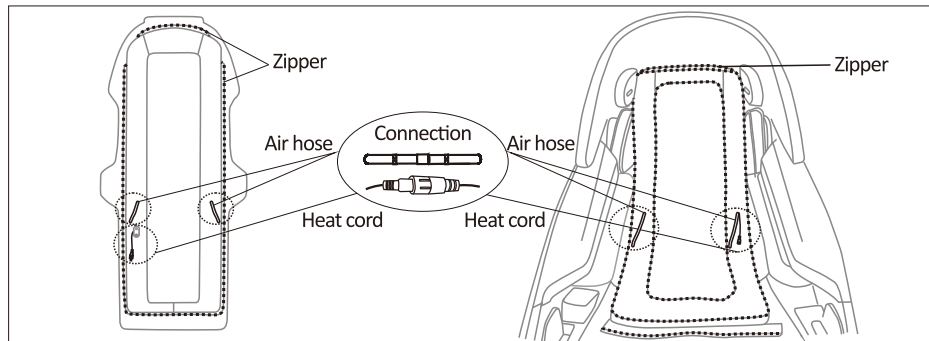


7

 6. Manual modes

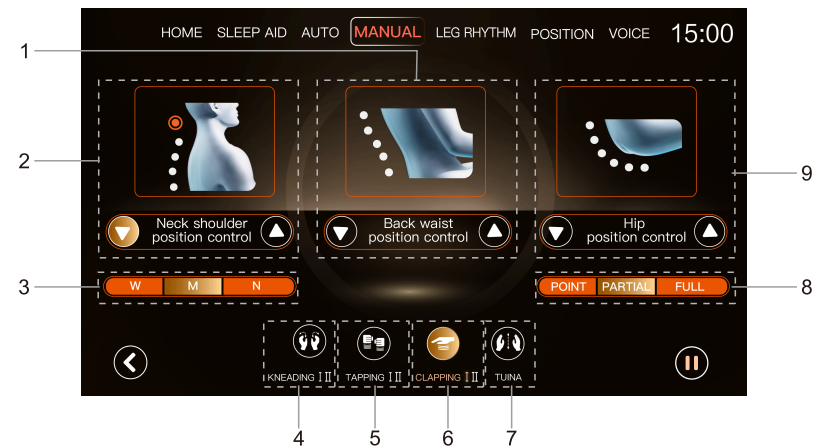

1. Back waist position control
2. Neck shoulder position control
3. Massage width adjust (it do not works once the kneading start)
4. Kneading I / Kneading II
5. Tapping I / Tapping II
6. Clapping I / Clapping II
7. Tuina
8. Massage area option
9. Hip position control

 
7. Airbag massage

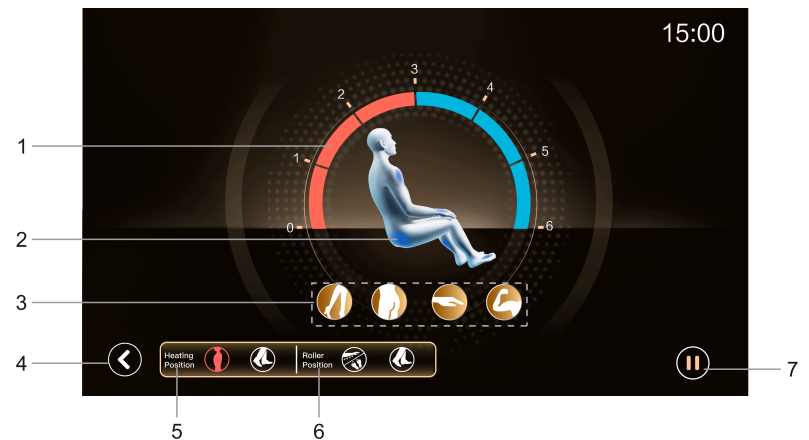


1. Airbag intensity adjust area
2. Airbag massage position indicate
3. Airbag massage position selection area
4. Return
5. Heat position selection area
6. Roller massage position selection area
7. Pause

OPERATION GUIDE

 5. Auto modes

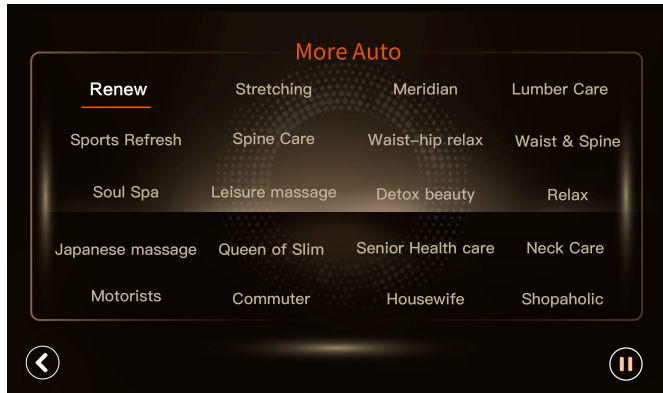

 There are 20 kinds of all-round unique automatic massage modes in the corresponding massage area.

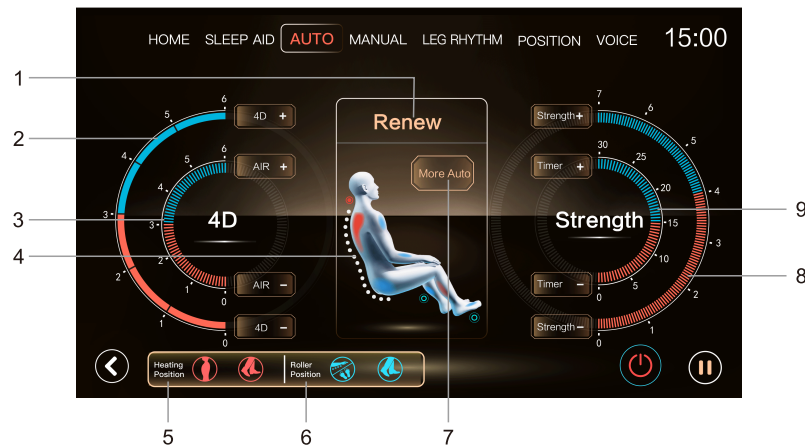


1. Auto program name
2. 4D intensity
3. Airbag intensity
4. Mechanism/airbag/heat/roller position
5. Heat position selection area
6. Roller massage position selection area
7. More Auto
8. Mechanism intensity
9. Massage time adjust

CHAIR INSTALLATION


- (1) First, attach the heat cord and air hoses in the back and seat cushion to the heat cord and air hoses in the chair body
- (2) At last, close the zippers on the seat cushion and massage chair.

 3 Install leg-rest

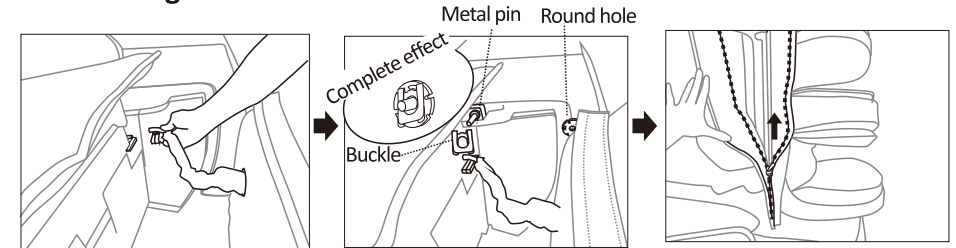

- (1) First connect the trachea of the leg with the bus on the massage chair.
- (2) Lift the leg and insert the round hole in the upper right corner of the leg into the metal pin shaft of the massage chair, and then insert it with a buckle to fix it.
- (3) When installing the left side, first move the whole leg to the right, align the round hole in the upper left corner and the pin of the massage chair, move the lower leg to the left, and then insert the buckle to fix it.
- (4) Pull the holster on the leg to the zipper of the massage chair.
- (5) Finish the leather case.

 
4 Install remote controller

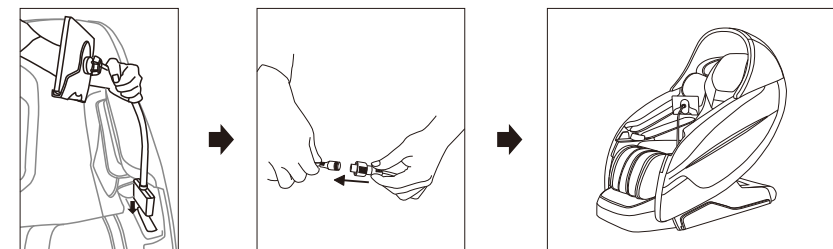

- (1) Push the controller bracket into the left slot of the massage chair.
- (2) Finally, join the connection between remote controller and massage chair.

CHAIR INSTALLATION

 5 Moving the massage chair

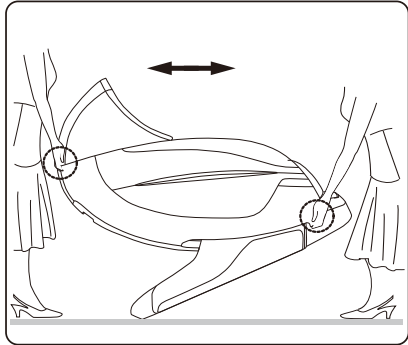


To move the massage chair 2 persons are required. One would hold the side panel and lift up as shown in the diagram. The next would press down the back-rest of the chair so that the castor wheels located at the back of the chair touch the floor.

Move the massage chair using the wheels. After moving to the desired location put the massage chair down slowly & carefully.

Note: Do not move the massage chair with user on it.

suggest moving the massage chair with a rug or carpet underneath to prevent any accidental damage to the floor.

 6 Place the massage chair an open area

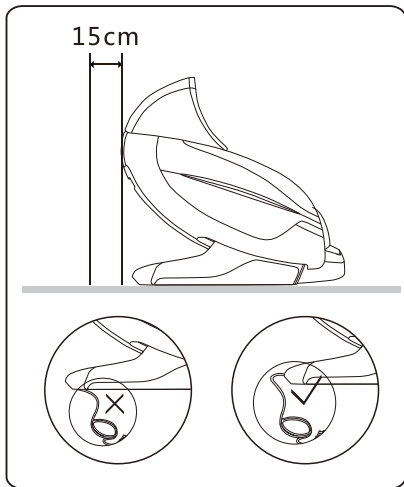

- Allow sufficient space around the chair for recline purposes. 15cm distance for the back side and 40 cm in front of the footrest.

***In order to avoid the damage of the floor and to reduce the noise, please put area rug under the massage chair.**

 
***Make sure that there are no barriers in front and the back of the massage chair.**

***Please do not put it in wet or uneven floor.**

***To avoid signal interference, please place it 4 feet away from AV,TV, and radio.**


OPERATION GUIDE

3. Detection

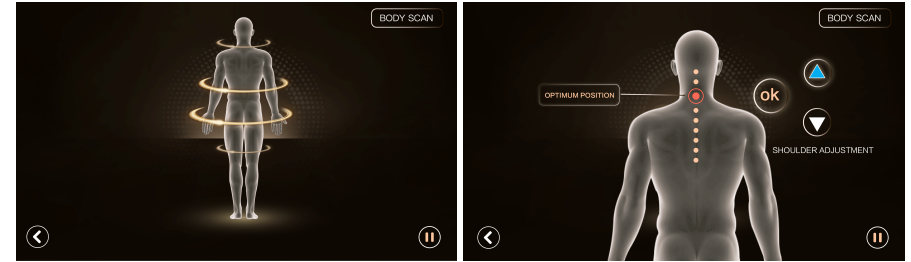

1. Latest body scanning technique
2. Within 8 seconds after scanning user can do minor adjustment to the shoulder position or press OK to confirm.

 4. Sleep aid

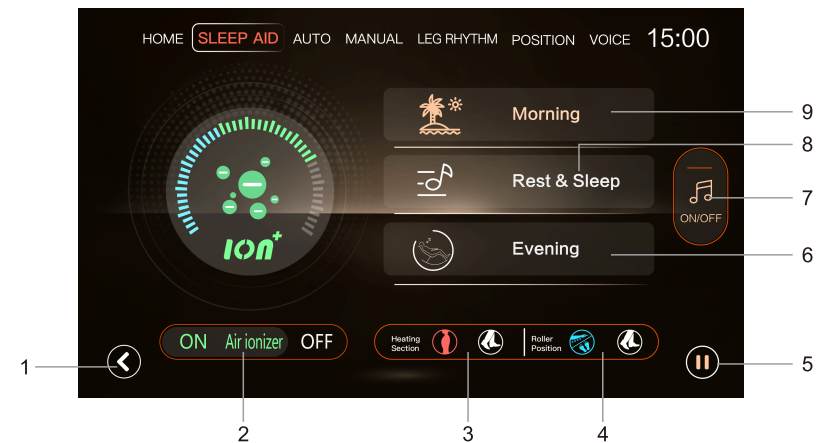


- | | | |
|---|-----------------------|---------------------------------|
| 1. Return | 2. Air Ionizer switch | 3. Heat position selection area |
| 4. Roller massage position selection area | 5. Pause | 6. Rest & Sleep |
| 7. Sleep aid switch | 8. Rest & Sleep | 9. Morning |

OPERATION GUIDE


BEFORE USE

1 Remote controller interface and description

 
1. Open the remote controller and the main menu will be displayed.
Please select the program you want.

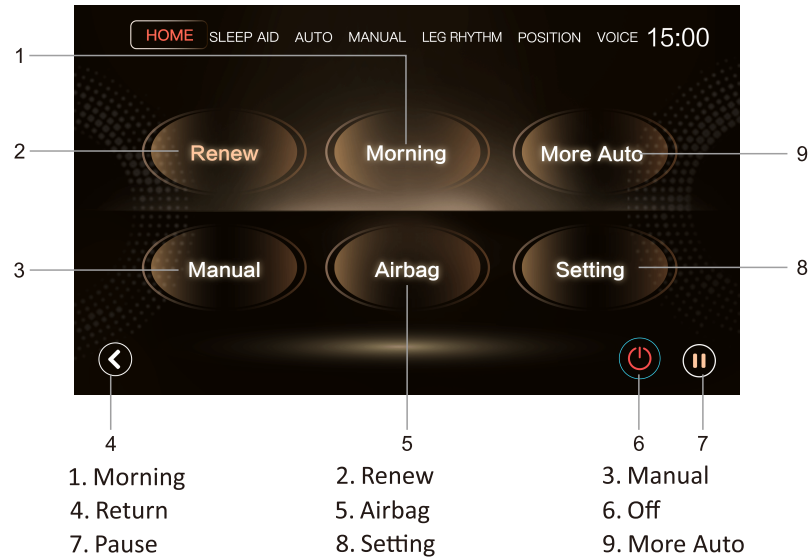

 
2. Setting

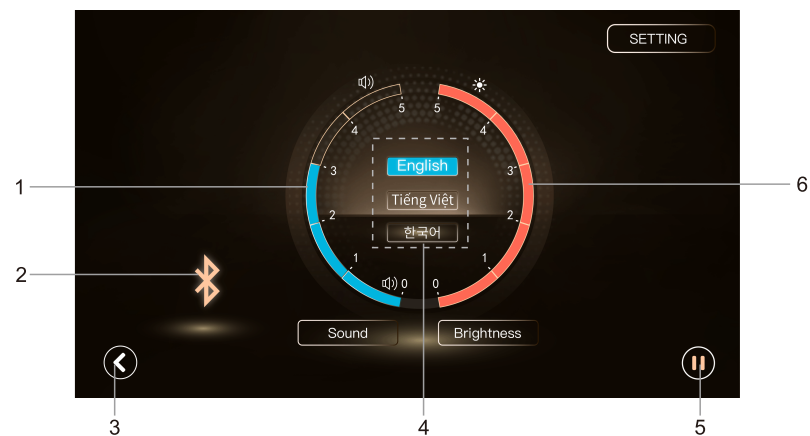

 
1. Sound adjustment area 2. Bluetooth: on/off 3. Return
4. Languages selection 5. Pause 6. Screen brightness adjustment area

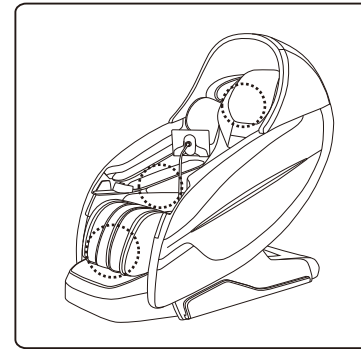

 
1. Make sure the product is in good condition and proper working order.
 - Check the headrest and backrest pad.
 - Inspect the power plug.
 - Make sure the footrest is in its upright original position in order to prevent damage.

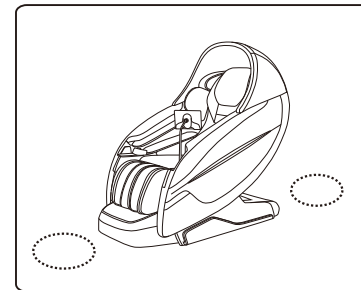

 2. Check the surrounding environment
 - Ensure there are no people, pets, or objects obstructing the massage chair.

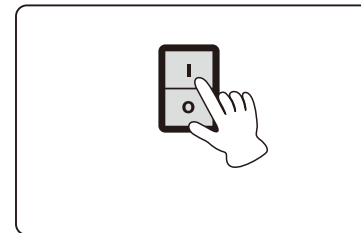

 
3. Plug in the massage chair power cord.
 - Connect the power cord.
 - Turn ON the power switch, located on the right side of the massage chair.

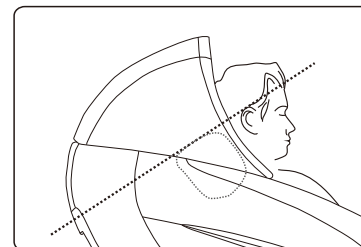

4. Adjust the position of the headrest.
 - Adjust the headrest until it is in a comfortable position.

REMOTE CONTROLLER

 Shortcut keys

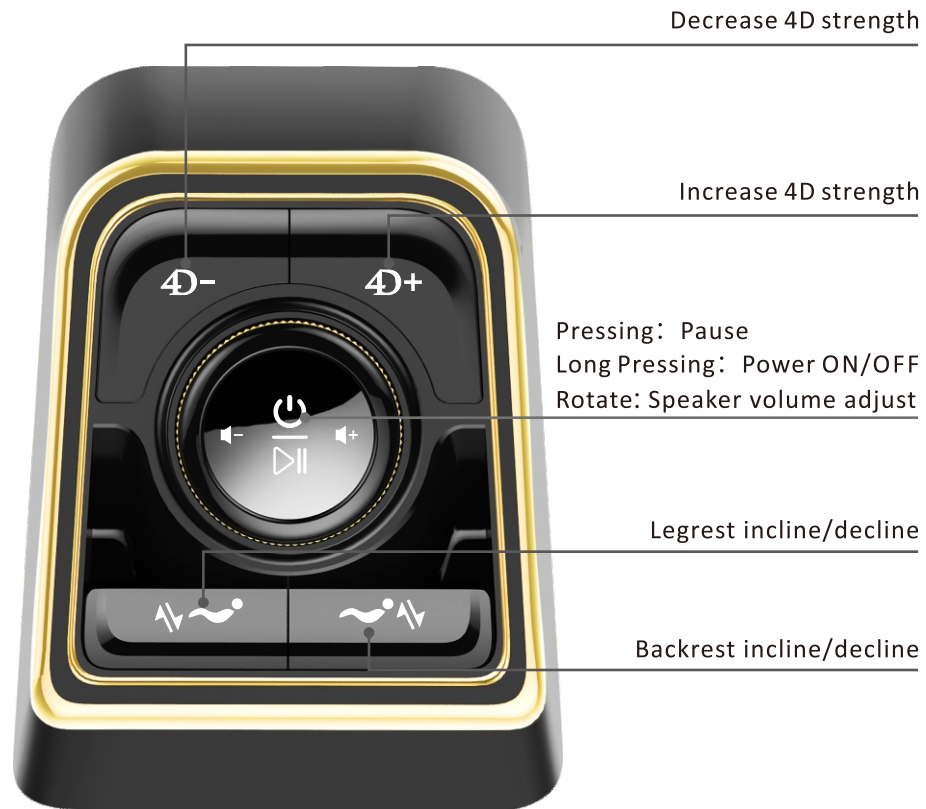

REMOTE CONTROLLER

Remote controller

